




Plan View

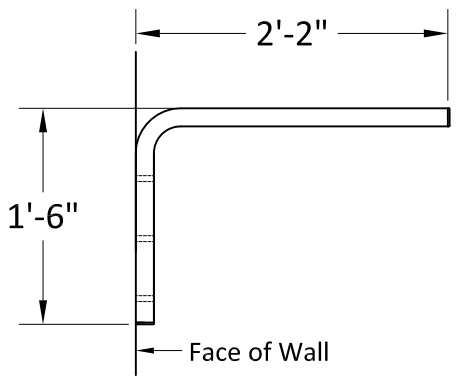

Side View

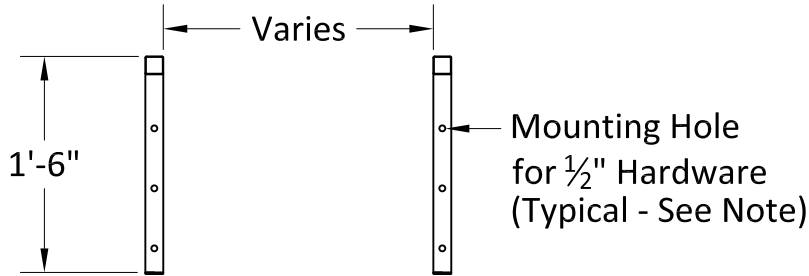


Elevation

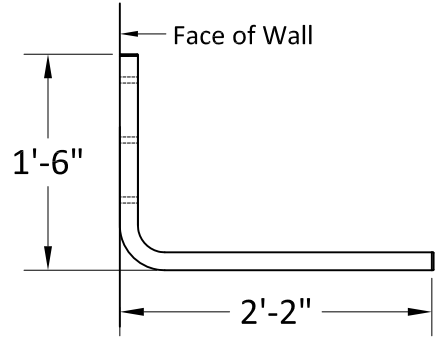

Side View  
("Leg Up" Option)

Important Note: Anchor each bracket to wall using all three holes with 1/2" bolts. The installer shall verify that wall is capable of supporting loads from bracket.

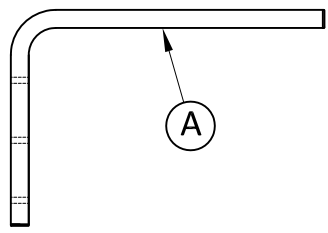

PARTS LIST

- Ⓐ (2) - 1-1/2" x 1-1/2" 11 gauge Tube Steel L-Brackets

Note - All mounting hardware is the responsibility of the installer

	<p>CUSTOM WALL BRACKET QSWB1000</p>	<p>www.quick-sling.com email: info@quick-sling.com fax: 1-(800)-699-0423</p>	<p>Quick Sling, LLC 391 W. Water Street Taunton, MA 02780 1-(800)-699-0543</p>
--	---	--	--